



Solder BNC-flange on back of PCB (fully copper).

BNC

SWR-coupler
50 ohm
144 - 440 MHz
48x44mm
pa0nhc 9909.

DC out 10n 100p BAT85

50 ohm

50 ohm

DC out 10n 100p BAT85